

Aufbauanleitung: Standelemente mit Sockelfüße

andiamo home


VENJAKOB

Vorsprung durch Design und Qualität


Service Hotline: Tel. +49 5209/592-0

Internet: www.venjakob-moebel.de (Weitere Aufbauanleitungen)


Das mitgelieferte Befestigungsmaterial (Dübel und Schrauben) ist ausschließlich für die Befestigung von Bauteilen an Beton und/oder festen Mauerwerk geeignet. Bitte beachten Sie auch bei den Wandmontageelementen die max. Belastungswerte. Die Wandbeschaffenheit ist idealerweise bei Auftragserfassung zu erfragen und spätestens vor der Montage unbedingt von fachkundigem Personal zu prüfen. Bei abweichender Beschaffenheit (z. B. Leichtbauwänden) ist eine andere, der Belastung angemessene Befestigung bauseits vorzunehmen. Klären Sie elektrische Vorleistungen für Anschluss- und Gerätetechnik. Frei hängende Beleuchtungen erfordern Kabelkanallösungen auf oder unter Putz

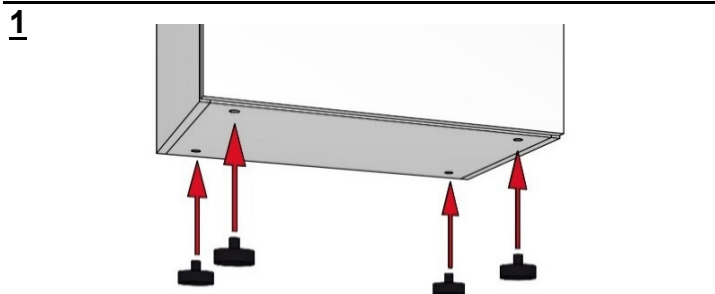


1
Transportschutz unterhalb des Sockelbodens abschrauben. Stellfüße / Möbelgleiter (Teile Nr.: 50611) mit dem Zapfen in den Sockelboden setzen.

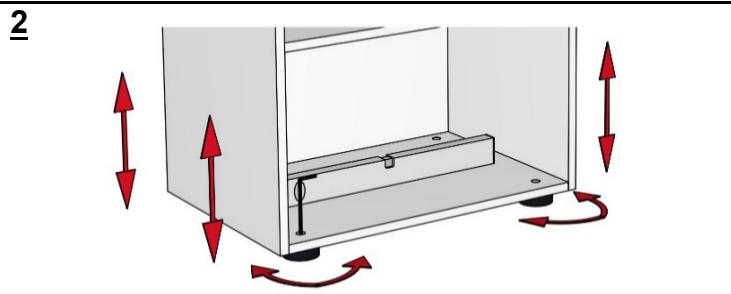

2
Frontteile (Schubkästen, offene Fächer, Türen) ausbauen. Möbelgleiter durch Drehen im Uhrzeigersinn auf den Nullpunkt stellen, horizontal und vertikal ausrichten. Korrekturen von innen mittels Inbusschlüssel oder von außen mit Hand vornehmen. Löcher mit Abdeckkappen schließen.

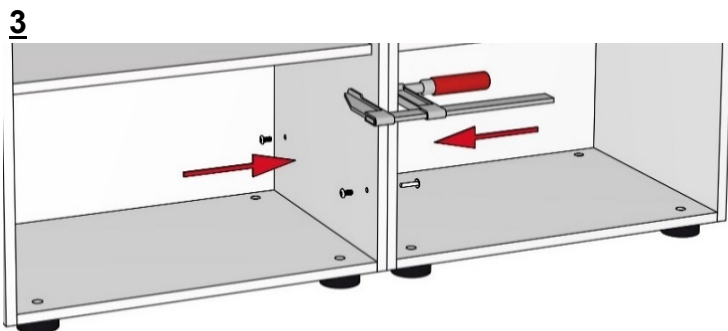


3
Verbindung Korpusseiten
Korpusseiten mit Möbelschraube M4 x 12 mm (Teile Nr.: 51202) und Gewindeendhülse 4 x 27 mm (Teile Nr.: 51290) verbinden, bzw. mit der Tellerkopfschraube 4 x 30 mm (Teile Nr.: 51458) festschrauben.

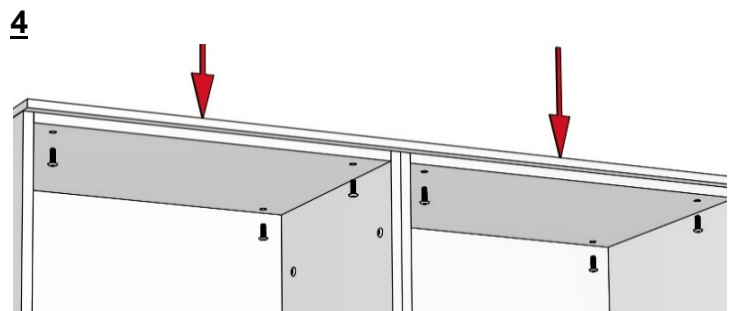


4
Deckblattmontage
Deckblatt von innen mit Möbelschraube M4 x 20 mm (Teile Nr.: 51254) festschrauben. Im Bereich des offenen Faches Senkschraube M4 x 20 mm (Teile Nr.: 51248) verwenden! Achtung: Offene Fächer im oberen Bereich unbedingt vor Deckblattmontage ausbauen!

5A Zusatzartikel Beleuchtung: => siehe Anschluss Beleuchtungsplan

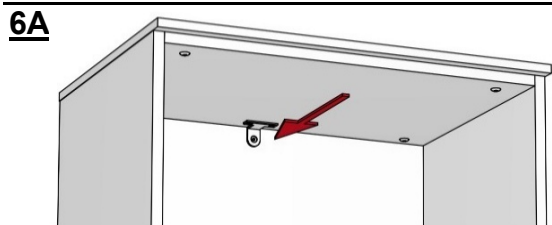

6A
Kippsicherung innen, Möbelhöhe ca. 105 - 174 cm
Mit kleinem Bohrer durch vormontierten Winkel und Rückwand bohren (Bohrposition an Mauerwerk markieren). Ø 8 mm Bohrung in Mauerwerk bohren. Dübel 8 x 40mm (Teile Nr.: 50801) verankern. Mit Spanplattenschraube 5 x 70 mm (Teile Nr.: 00210) befestigen.

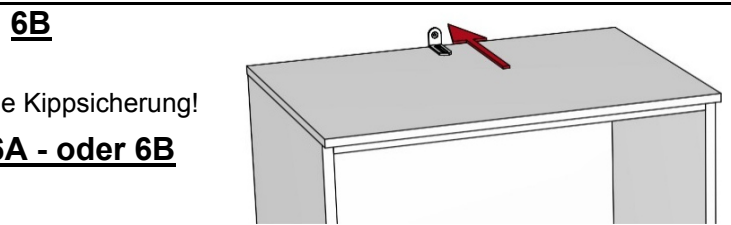

6B
Lowboard ohne Kippsicherung!
entweder 6A - oder 6B

Kippsicherung außen, nur bei Möbelhöhe ca. 207 cm!
Set "Wandbestigung" (Teile Nr.: 50570) verwenden. Anbringung oben auf dem Deckblatt.

7. Griffe je nach Modell montieren, (Teil-Nr. 51107 Griff oben an der Front, Teil-Nr. 51108 Griff unten an der Front), Euroschraube 4,2 x 13,5 mm (Teil-Nr. 51235)

Fronten einsetzen, ggf. offene Fächer wieder einbauen, Zierkappen auf Türscharniere klipsen!

Assembly instructions: Cabinet with feet

andiamo home

VENJAKOB


Vorsprung durch Design und Qualität

Service Hotline: Tel. +49 (0) 5209 592 0

Internet: www.venjakob-moebel.de (additional assembly instructions)


The fixture materials provided with this product (dowels and screws) are only suitable for fixing parts to concrete and/or solid masonry. Please observe the maximum load that the wall-mounted elements can carry. Ideally, the suitability of the wall should be enquired about when the order is made and must be checked by specialist staff before the cabinet is assembled at the latest. If the condition of the wall is not suitable (e.g. if it is a lightweight partition wall), then another type of fixture suitable for the load that is to be carried should be used. Check the electrical input of any connection or device technology. Free-hanging light fixtures require cable duct solutions that are either on or under plaster.

1

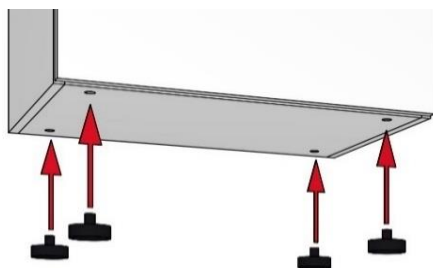


Unscrew the transport protection from beneath the base. Place the adjustable feet / furniture gliders (Part No.: 50611) with the dowels in the base.

2

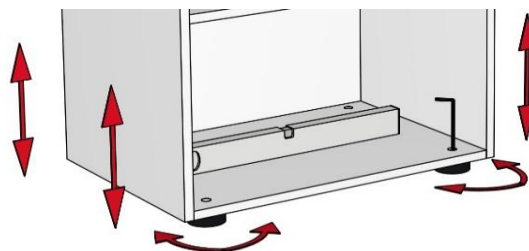

Remove front parts (drawers, open compartments, doors). Set the furniture gliders to the zero point by turning them in a clockwise direction and then adjust them vertically and horizontally. Make any other adjustments from the inside with an SW4 Allen key or from the outside by hand. Cover any holes with the cover caps.

3

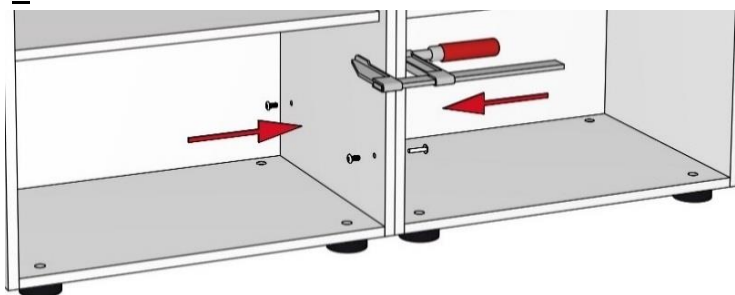


Connection of carcass sides (two designs possible)

Design 1: With 4 x 30 mm wafer head screws (Part No.: 51458), if only one side is pre-drilled.

Design 2: With M4 x 10 mm furniture screws (Part No.: 51203) and M4 5 x 27 mm thread end sleeves (Part No.: 51290), if both sides are pre-drilled or if the pre-drilled holes have been pierced with a Ø 5 mm drill bit.

4

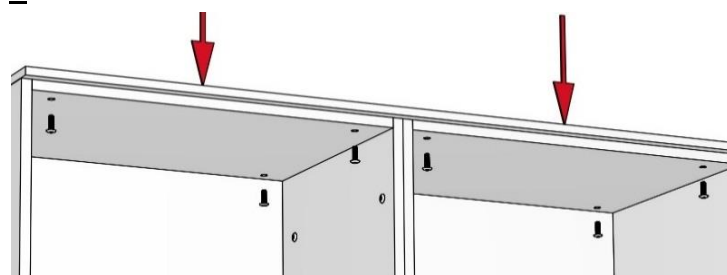


Overlay assembly

Firmly screw the overlay into place from inside with M4 x 20 mm furniture screws (Part No.: 51254). Use M4 x 20 mm counter-sunk screws in sections with open compartments (Part No.: 51248)! Please note: Open compartments in the upper part must be removed before the overlay is added!

5A Additional item lighting: => see lighting wiring diagram


6A

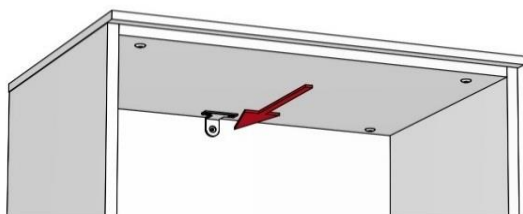

Low sideboard with no anti-tip protection!

Either 6A - or 6B

6B

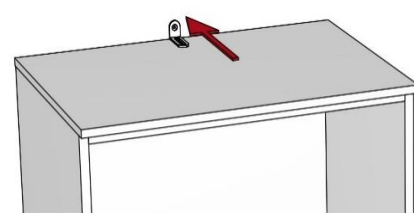

Inner anti-tip protection, furniture height approx. 105 - 174

cm
Drill through pre-assembled bracket and back panel with small drill bit (mark the drilling position on the masonry). Drill Ø 8 mm holes in the masonry. Anchor 8 x 40 mm dowels (Part No.: 50801). Fasten into place with 5 x 70 mm chipboard screws (Part No.: 00210).

Outer anti-tip protection, only with furniture height approx. 207 cm!

Use "Wall fastening" set (Part No.: 50570). Affix to the top of the overlay.

7 Attach handles to (Part No.: 51107 for upper front) (Part No.: for lower front) fix with 4,2 x 13,5 mm screws (Part No.: 51235).

Reattach the fronts or re-mount open compartments, clip the decorative caps onto the door hinges!